## LEXUS\_V01.10 Daig Function List(Note:For reference only)

## NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- $\bigcirc$  This function is not supported.
- ▲ This function is the new feature in this version.

Model	EcuInfo	Read Codes	Erase Codes	Live Data
Engine	0	•		•
ECT	0	•	•	•
ABS	0	•	•	•
EMPS	0	•	•	•
Free-Tronic	0		•	•
Air suspension	0			
AHC AHC	0	•	•	
VGRS	0	•	•	
EMS .	0	•		
Tire Pressure Monitor	0	•	•	
SRS Airbag	0			
BODY	0	•		
Immobiliser	0	_		•
	0			
Tvss	0		•	
Entry&Start			<del></del>	
Occupant Detection	0	*	•	
D-SEAT SW		*	*	
AFS	0	•	•	
Pre-Crash	0	•	•	
D-Door Motor	0	•	•	•
Theft Deterrent	0	•	•	•
Air Conditioner	0		•	•
Combination Meter	0	*	*	•
Back Door	0	•	•	•
Driver Seat	0	*	*	•
Tilt&Telescopic	0	•	•	•
Mirror	0	*	*	•
Gateway	0	•	•	•
Passenger Door	0	•	•	•
Rear left Door	0	•	•	•
Rear right door	0	•	•	•
Sliding Roof	0	*	*	•
Driver Door	0	•	•	•
Master Switch	0	•	•	•
Rear Right Seat	0	•	•	•
Rear Left Seat	0	*	*	•
Rear Seat Switch	0	*	*	•
Steering Pad Switch	0	*	*	•
Clearance Sonar	0	•	•	•
Rain Sensor	0	*	*	•
Wiper	0	*	*	•
Combination Switch	0	*	*	•
Steering Lock	0	•	•	•
Passenger Seat	0	*	*	•
Retractable Hardtop	0	•	•	•

	i	i		1
Main Body	0	•	•	•
P-Door Motor	0	•	•	•
RL-Door Motor	0	•	•	•
RR-Door Motor	0	•	•	•
HV Gateway	0	•	•	•
Night View	0	•	•	•
HL Autoleveling	0	•	•	•
ECM Gateway	0	•	•	•
ECB Gateway	0	•	•	•
WIL Gateway	0	•	•	•
Center Console Switch	0	*	*	•
Rear Console Switch	0	•	•	•
Front Left Seat A/C	0	•	•	•
Front Right Seat A/C	0	•	•	•
Rear left Seat A/C	0	•	•	•
Rear Right Seat A/C	0	•	•	•
Electric Power Control	0	•	•	•
Active Headrest R	0	•	•	•
Active Headrest L	0	•	•	•
Pre-Crash 2	0	•	•	•
Accessory Gateway	0	•	•	•
MIRROR R	0	•	•	•
MIRROR L	0	•	•	•
Navigation System	0	•	•	•
PM1 Gateway	0	•	•	•
Charging Control	0	•	•	•
Starting Control	0	•	•	•
PM2 Gateway	0	•	•	•
Remote Engine Starter	0	•	•	•
Gateway BEAN	0	•	•	•
Gateway CAN	0	•	•	•
Back DoorPW	0	•	•	•
Transmission Control	0	•	•	•
Parking Assist Monitor System	0	•	•	•
Power Source Control	0	•	•	•
EHPS	0	•	•	•
Four Wheel Drive	0	•	•	•
Stabilizer	0	•	•	•
Intelligent Parking Assist	0	•	•	•
Electric Parking Brake	0	•	•	•
Lane Keeping Assist	0	•	•	•
Front Stabilizer	0	•	•	•
Rear Stabilizer	0		•	•
ENGINE AND ECT	0	•	•	•
Cruise Control	0	•	•	•
ENGINE (LH Bank)	0	•	•	•
ENGINE (RH Bank)	0		•	
HV Battery	0	•	•	•
	0	•	•	•
Hybrid Control		•	•	•
Sequential M/T	0	_		•
Multi-Mode M/T	0	•	•	•
Stop And Go	0	_		•
Radar Cruise	0	•		•
Laser Cruise	0	•	•	

E-ACM	0	•	•	•
Telematics	0	•	•	•
PPS PPS	0	•	•	•
Advanced Parking Guidance System	0		•	
FC	0	•	•	
FCHV	0	•	•	•
EV	0	•	•	•
Battery	0	•	•	•
Front Right Door	0	*	*	•
Front Left Door	0	*	*	•
KDSS	0	•	•	•
Telematics	0	•	•	•
A/B	0	•	•	0
A/T	0	•	•	•
AMT	0	•	•	•
ARS	0	•	•	•
ASG	0	•	•	•
Bluetooth communication module	0	•	•	•
CAN bus gateway	0	•	•	0
CAN bus gateway V	0	•	•	0
CVT	0	•	•	•
DRS	0	•	•	•
eco IDLE	0	•	•	•
ECT (SIL)	0	•	•	•
EFI EFI	0	•	•	•
EPS	0	•	•	•
FC	0	•	•	0
FCHV	0	•	•	0
HV	0	•	•	•
ITC	0	•	•	•
KFS	0	•	•	*
RL seat headrest ACT	0	•	•	•
ACT RR seat headrest	0	•	•	•
Pre-crash seat back seat RL	0	•	•	•
Pre-crash seat back seat RR	0	•	•	•
Active rear wing	0	•	•	•
Engine 2	0	•	•	•
Grille shutter	0	•	•	•
Cruise Control 2	0	*	*	•
Stop & Go	0	•	•	•
Diagnostics recorder	0	•	•	0
Panoramic View Monitor	0	•	•	•
Blind Spot Monitor Slave	0	•	•	•
Blind Spot Monitor Master	0	•	•	•
Plug-in control	0	•	•	•
Body / gateway	0	•	•	•
Multi-bus gateway	0	•	•	0
No.1 multi-bus monitoring	0	•	•	0
No.2 multi-bus monitoring	0	•	•	0
The motor-generator	0	•	•	•
Remote Security	0	•	•	•
Vehicle control	0	•	•	•
PKB electric	0	•	•	•
	<u> </u>	_	_	-

## LEXUS\_V01.10 OIL Function List (Note:For reference only)

## NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Vehicle	Area	Year	OIL
CT200h	USA	2011 - 2012	*
ES330	USA	2006	*
ES350	USA	2007 - 2012	*
GS300	USA	2006	*
GS350	USA	2007 - 2011	*
GS430	USA	2006 - 2007	*
GS450h	USA	2007 - 2011	*
GS460	USA	2008 - 2011	*
GX470	USA	2006 - 2009	*
HS250h	USA	2010 - 2011	*
IS F	USA	2008 - 2012	*
IS250	USA	2006 - 2012	*
IS350	USA	2006 - 2012	*
LS430	USA	2006	*
LS460	USA	2007 - 2012	*
LS600h	USA	2012	*
LX470	USA	2006 - 2007	*
LX570	USA	2008 - 2011	*
RX330	USA	2006	*
RX350	USA	2012	*
RX400h	USA	2006 - 2008	*
RX450h	USA	2010 - 2012	*
SC430	USA	2006 - 2010	*